



150N Draft 802.11n Wireless USB Adapter

Model # AWLL6070

User's Manual

Rev. 1.0

Table of Contents

1. Introduction	3
1.1 Package Contents	3
1.2 Features	3
2. Installation	4
3. Configuring the Adapter	13
4. Wireless Monitor.....	18
4.1 Wireless Information	18
4.2 AP List	19
4.3 Profile Settings.....	20
4.4 Configuring Encryption	22
4.5 Ad-hoc and Peer-to-Peer Wireless Networks	28
4.6 About	31
Appendix A – Features.....	32
Appendix B – Information	33
Technical Support	35

1. Introduction

Congratulations on your purchase of the 150N Draft 802.11n Wireless USB Adapter. The 150N Adapter provides wireless data rate of up to 300 Mbps* downlink and 150Mbps* uplink when used with other AirLink101® 150N or 300N wireless products. The high bandwidth combined with extended wireless coverage delivers fast and reliable connection for all of your networking applications.

A full range of security features such as WEP, WPA-PSK, and WPA2-PSK provide the highest level of wireless network security. The bundled Wireless Utility allows you to set up the adapter with an easy-to-use user interface. Best of all the 150N USB Adapter works with 802.11g and 802.11b network devices ensuring compatibility with your existing wireless products.

1.1 Package Contents

Before you begin the installation, please check the items of your package. The package should include the following items:

- Wireless USB Adapter
- USB Cable
- Quick Installation Guide
- Installation CD (Driver/Utility/Manual)

1.2 Features


- Industry's highest wireless data rate with IEEE 802.11n draft specification 2.0.
- 64-bit/128-bit WEP encryption, Pre-shared Key (PSK), and Wi-Fi Protected Access (WPA2) and WPA support provide full protection for your wireless connection
- Higher data rate increases the reliability and stability of wireless connections
- Great for environments with higher wireless data traffic requirements
- Fully backward-compatible with 802.11b/g devices
- Works best with other AirLink101® 150N and 300N wireless products

2. Installation

This section provides instructions on how to install the **150N Draft 802.11n Wireless USB Adapter**. The driver is installed along with the utility.

Step 1 Insert the USB adapter into an available USB port and turn on your computer.

Step 2 After turning on the computer, Windows will launch the **Found New Hardware Wizard**. The Found New Hardware Wizard appears differently depending on your operating system. Click **Cancel** to quit the wizard and insert the Installation CD into your CD drive.

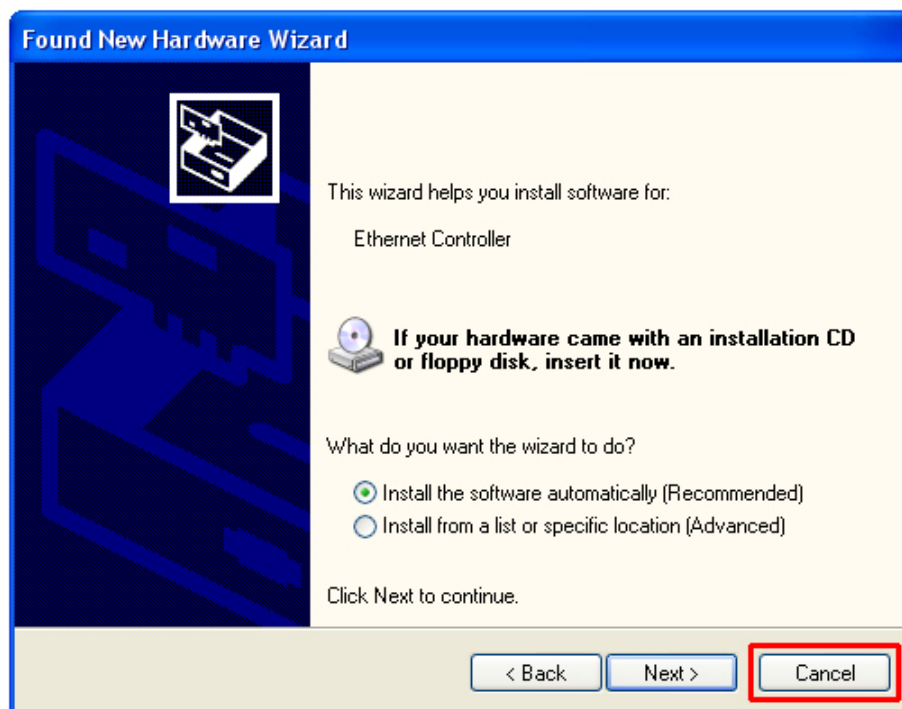

Step 3 The Autorun screen will pop up. Select **Install Utility and Driver** from the menu.



150N Wireless USB Adapter

Install Utility and Driver

View User Manual

View Quick Installation Guide

Install Adobe® Acrobat


150N

Browse CD


Exit

Note: If the Autorun screen doesn't appear automatically, or if you get a blank white screen, go to **Start, Run**, and type **D:\Utility\Setup.exe** (where **D** is the letter of your CD drive) and click **OK**.



Windows Vista users: At this point, you may get a warning message like the one below. Make sure that you click **Allow** to continue with the installation.

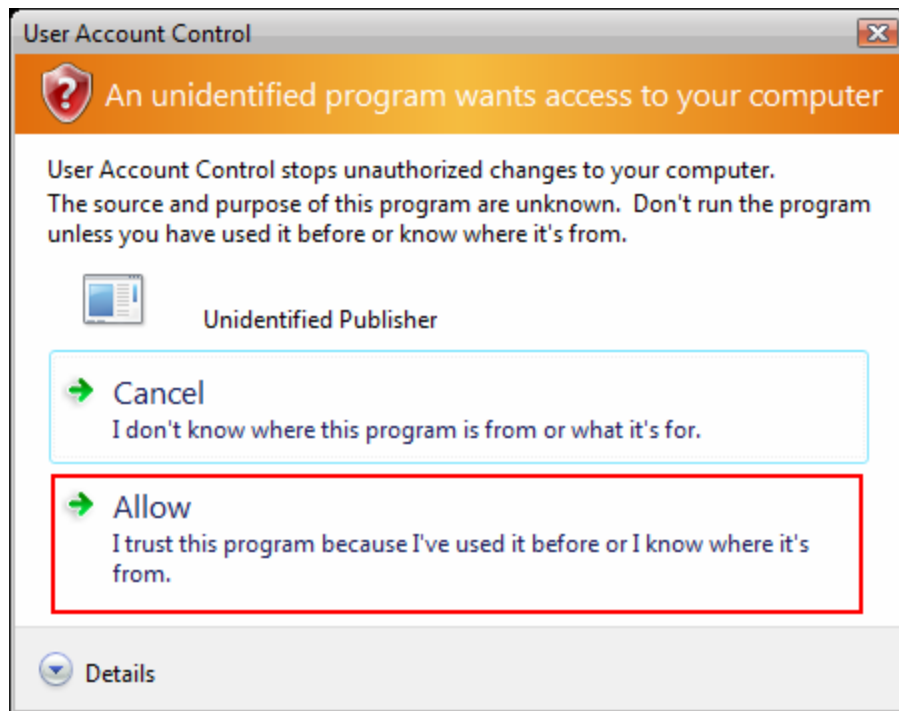


Step 4 Click **Next** at the welcome screen.

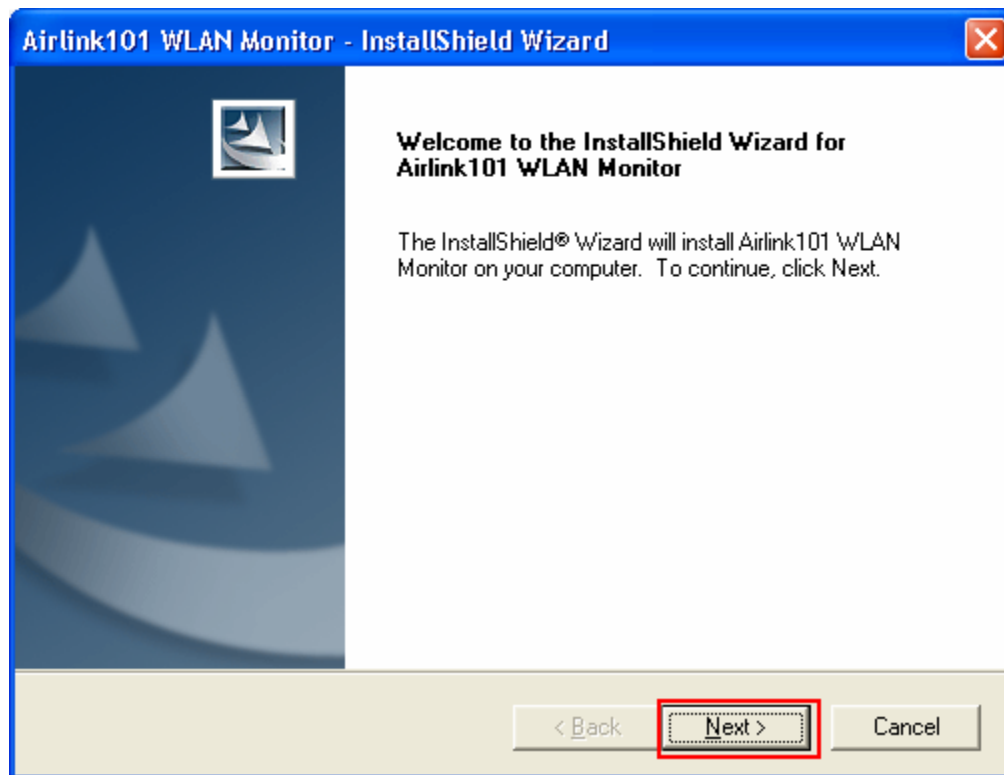


Step 5 Click **Next** to accept the default destination folder.

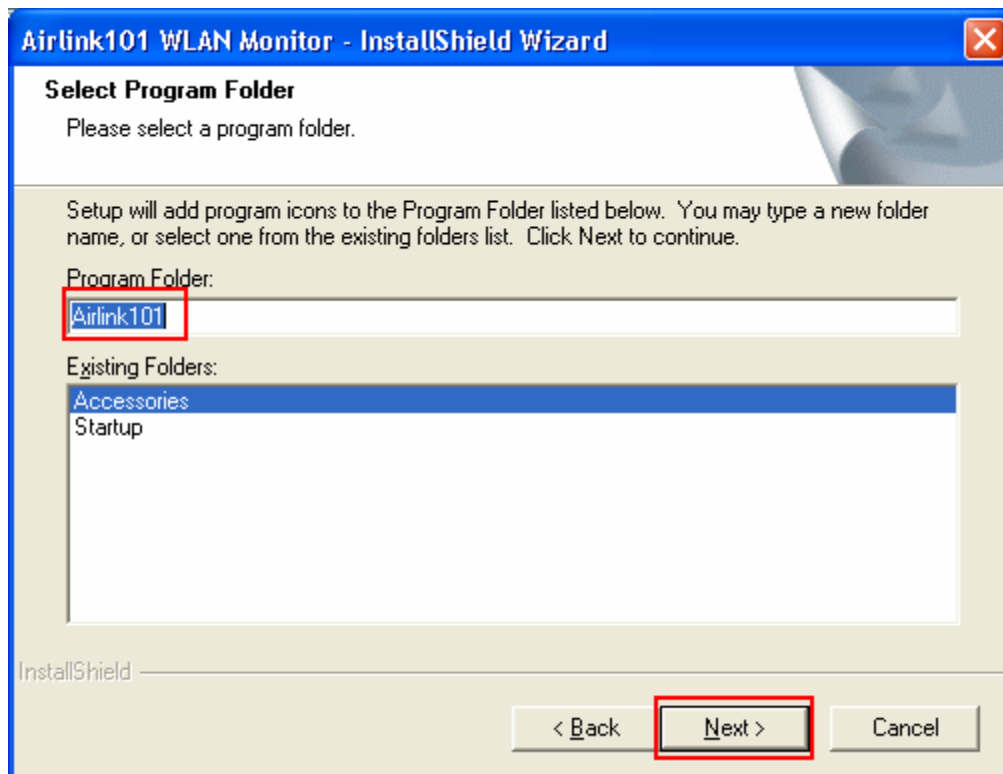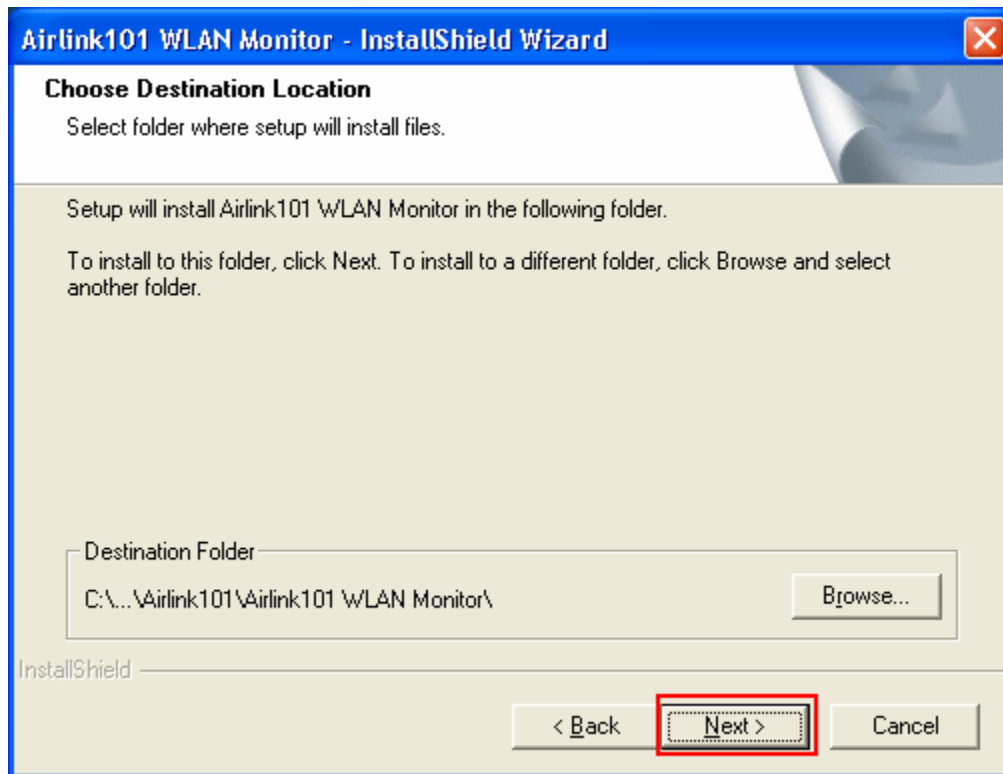


Step 6 Click **Continue Anyway** at the Windows Logo Screen. (For Windows 2000, click **Yes** at the Digital Signature Not Found prompt).

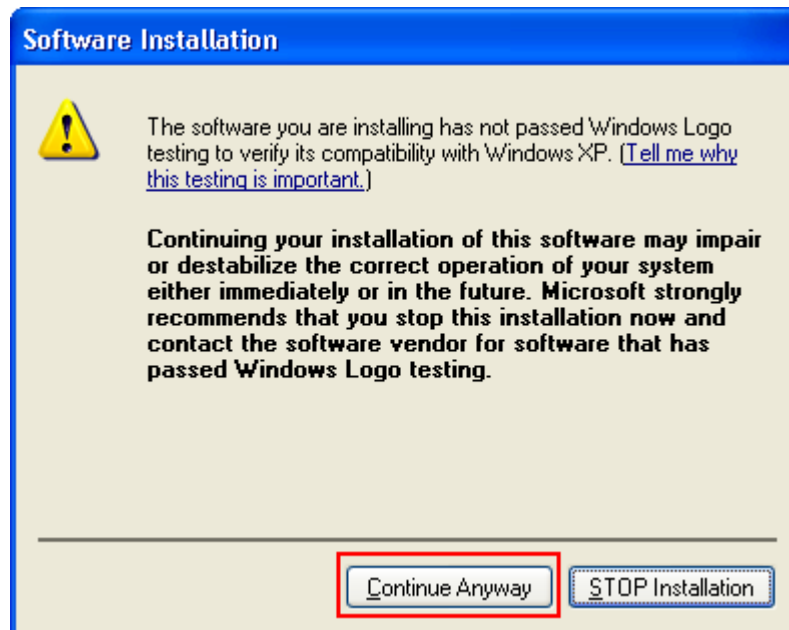


For Windows Vista, click the **Install this driver software anyway** button when the security warning appears.

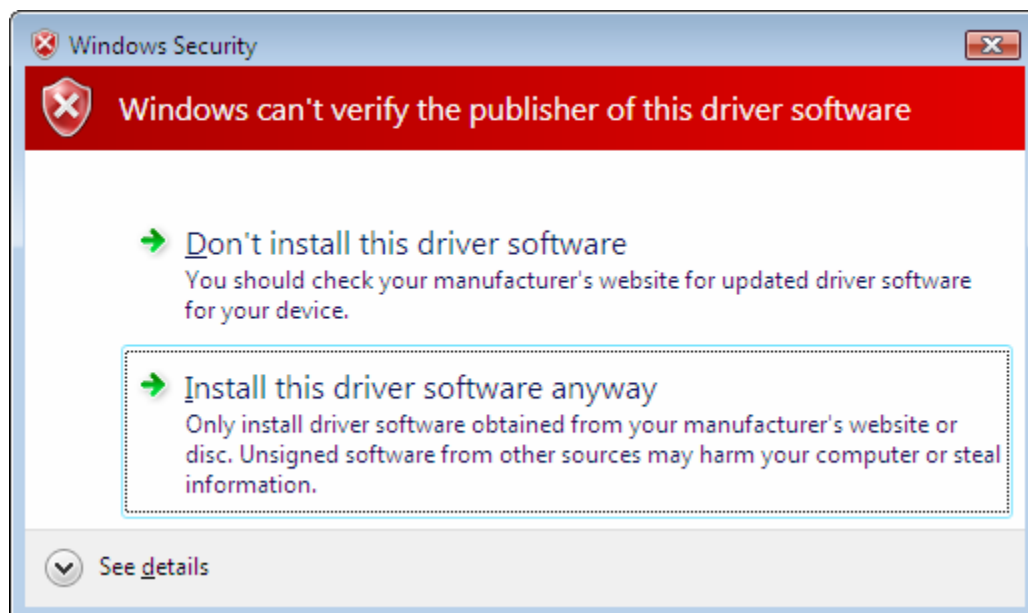


Step 7 Click **Yes, I want to restart my computer now** and then **Finish** to restart your computer.

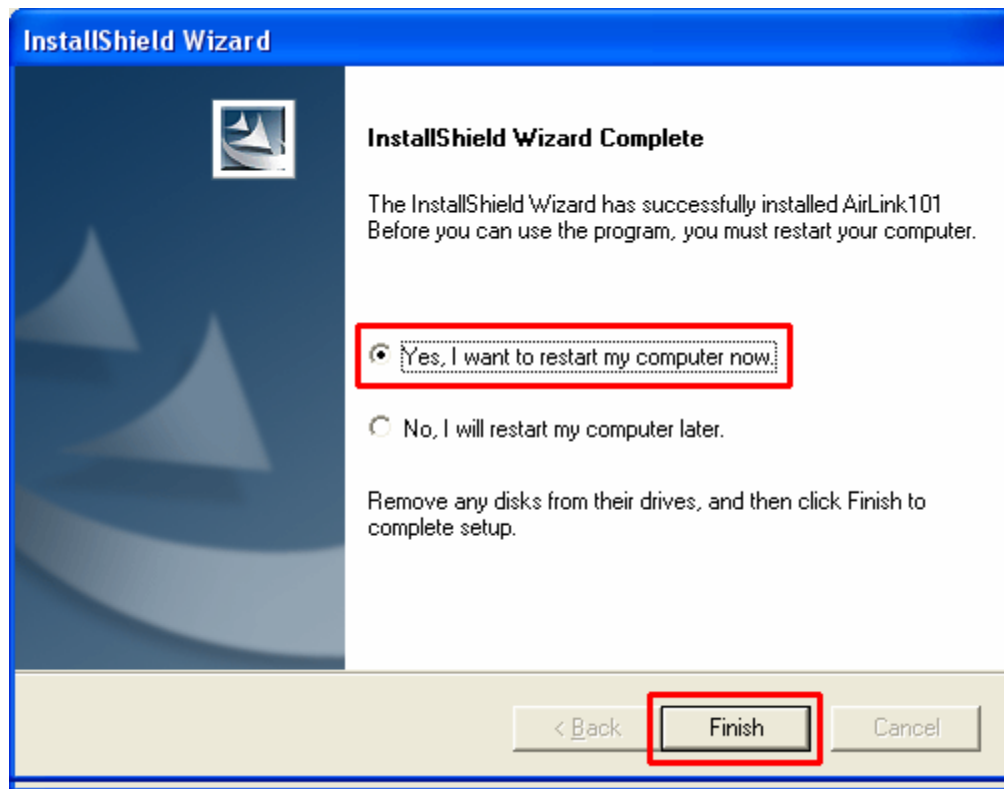

Step 8 After the computer is restarted, Windows will ask to connect to Windows Update, select **No, not this time** and click **Next**. If this screen does not appear, you can skip to section 2.2.

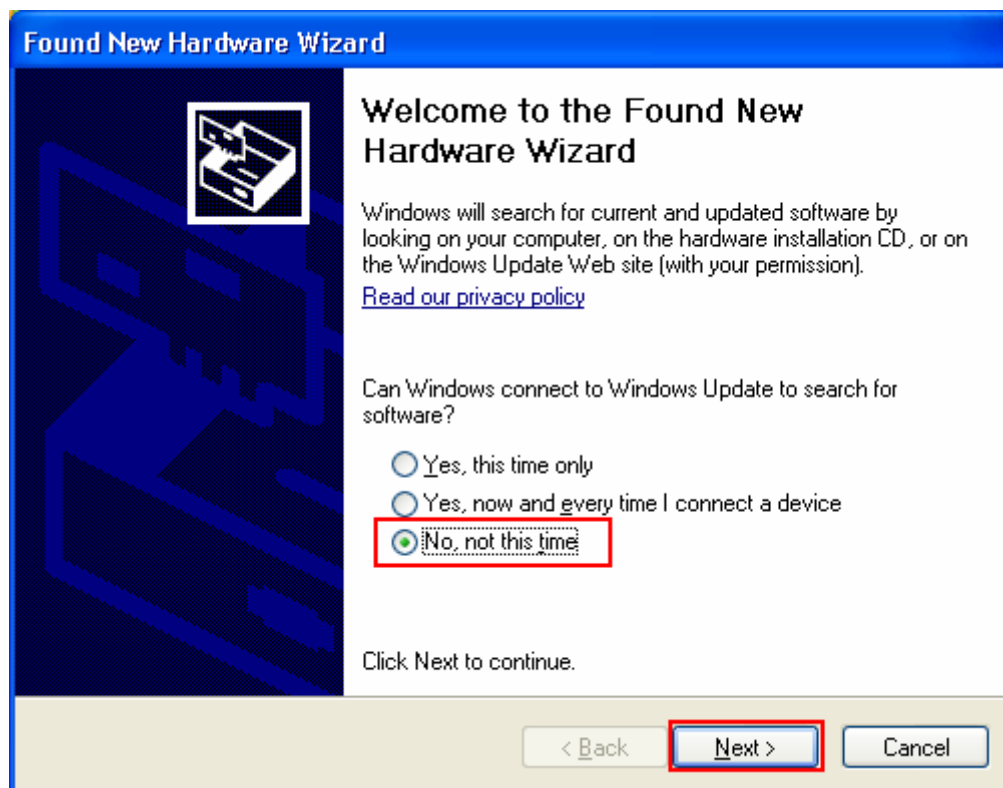


Step 9 Select **Install the software automatically** and click **Next**.

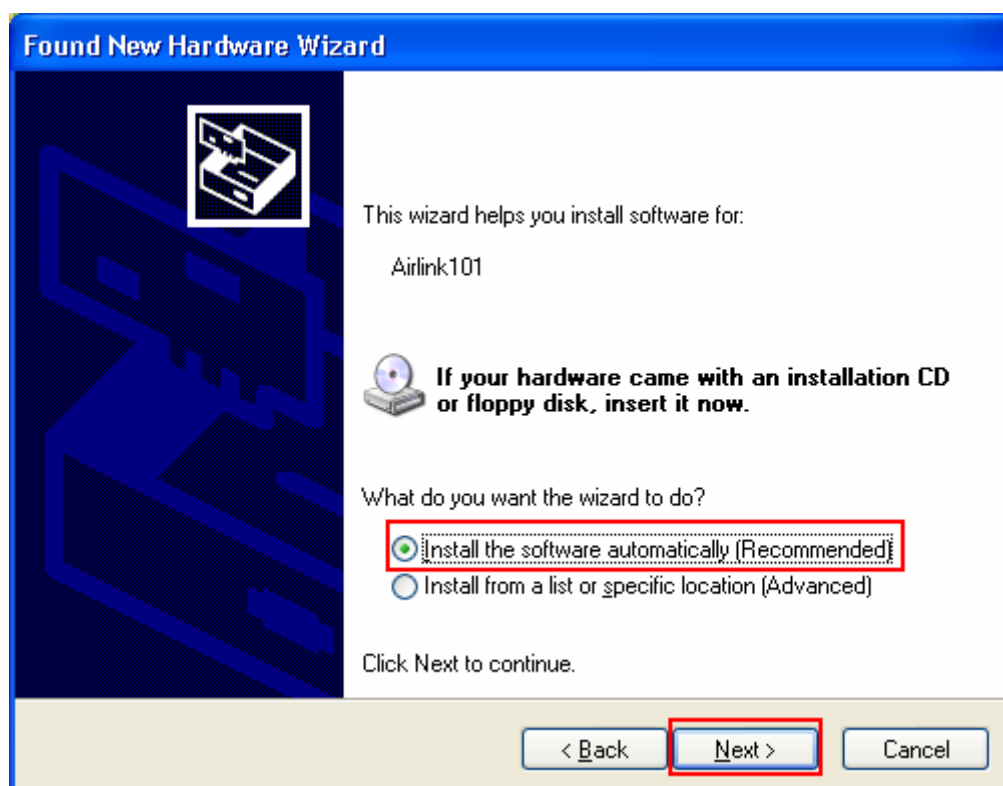


Step 10 Click **Continue Anyway** at the Windows Logo Screen.
(For Windows 2000, click **Yes** at the Digital Signature Not Found prompt).



For Windows Vista, click the **Install this driver software anyway** button when the security warning appears.

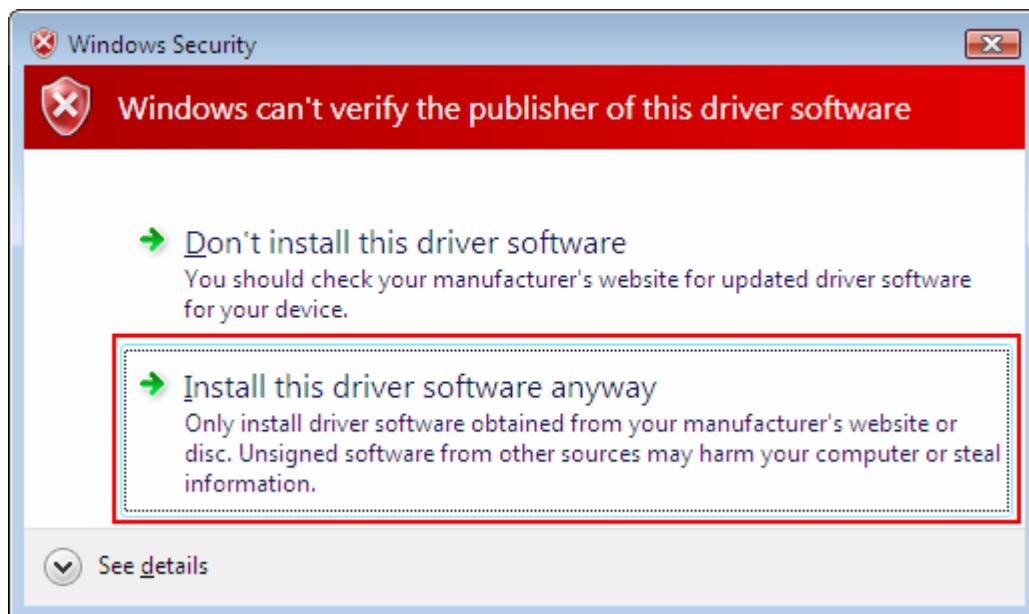

Step 11 Click **Finish**.

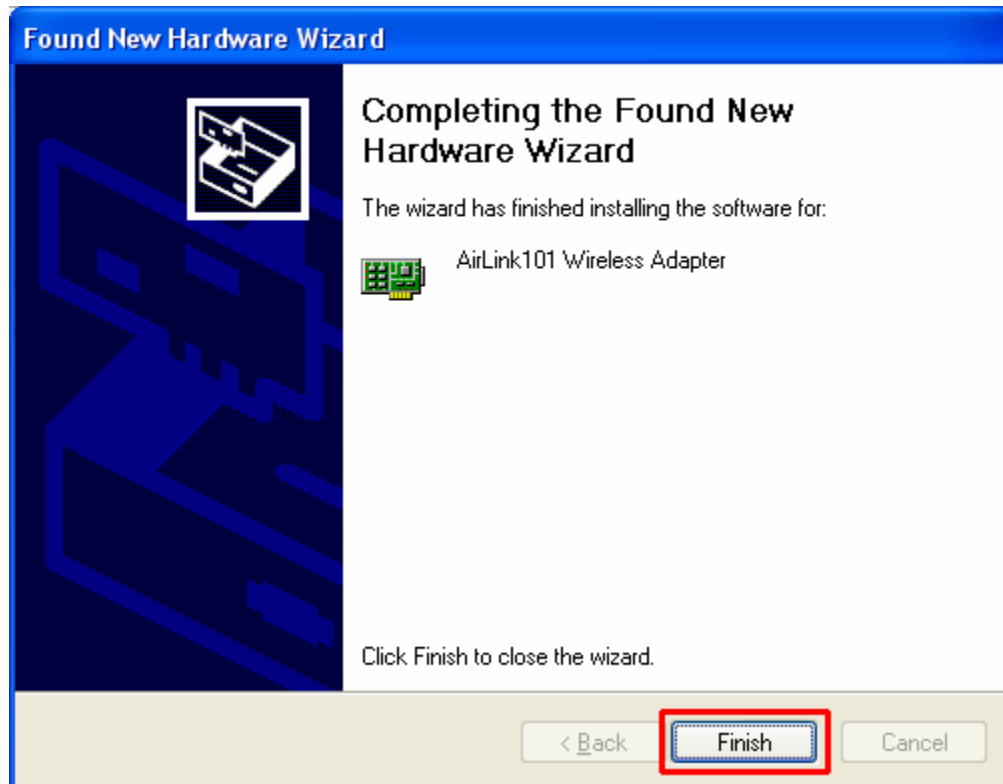

3. Configuring the Adapter

This section describes how to connect your wireless adapter to a wireless network.


Note to Windows XP Users:

You must disable the Wireless Zero Configuration Utility in order to use the bundled Wireless Utility. Please follow the steps below to disable XP's wireless utility. Windows Vista users can skip the following instructions and go to **Step 1**

Double-click on the **Wireless Network Connection Icon** in the system tray and then click on **Properties** or **Advanced**.




When the new wireless network connection properties window appears, go to the **Wireless Networks** tab, uncheck the “**Use Windows to configure my wireless network settings**” check box and click **OK**.

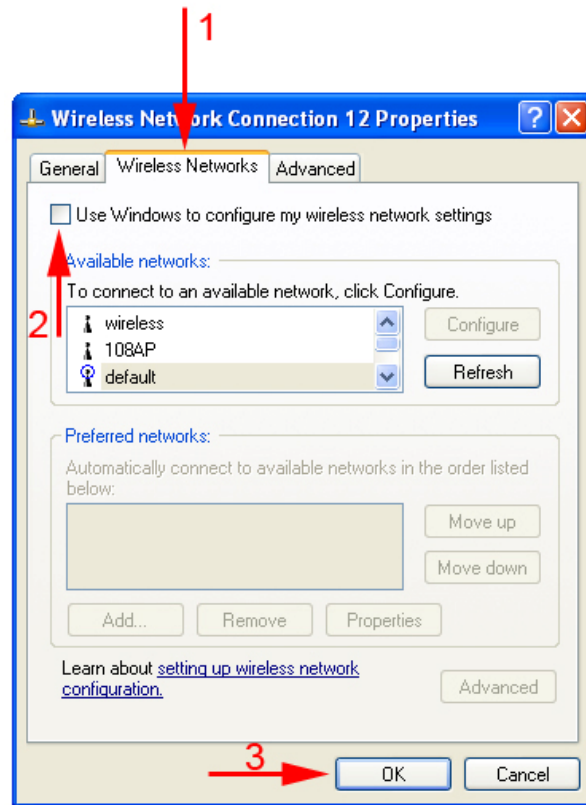

Step 1 To open the utility, double click on the Wireless Monitor icon in the system tray at the bottom right-hand corner of your screen.




Step 2 Go to the **AP List** tab, select the **SSID** (Network Name) of the wireless network you wish to connect to, and click **Connect**.

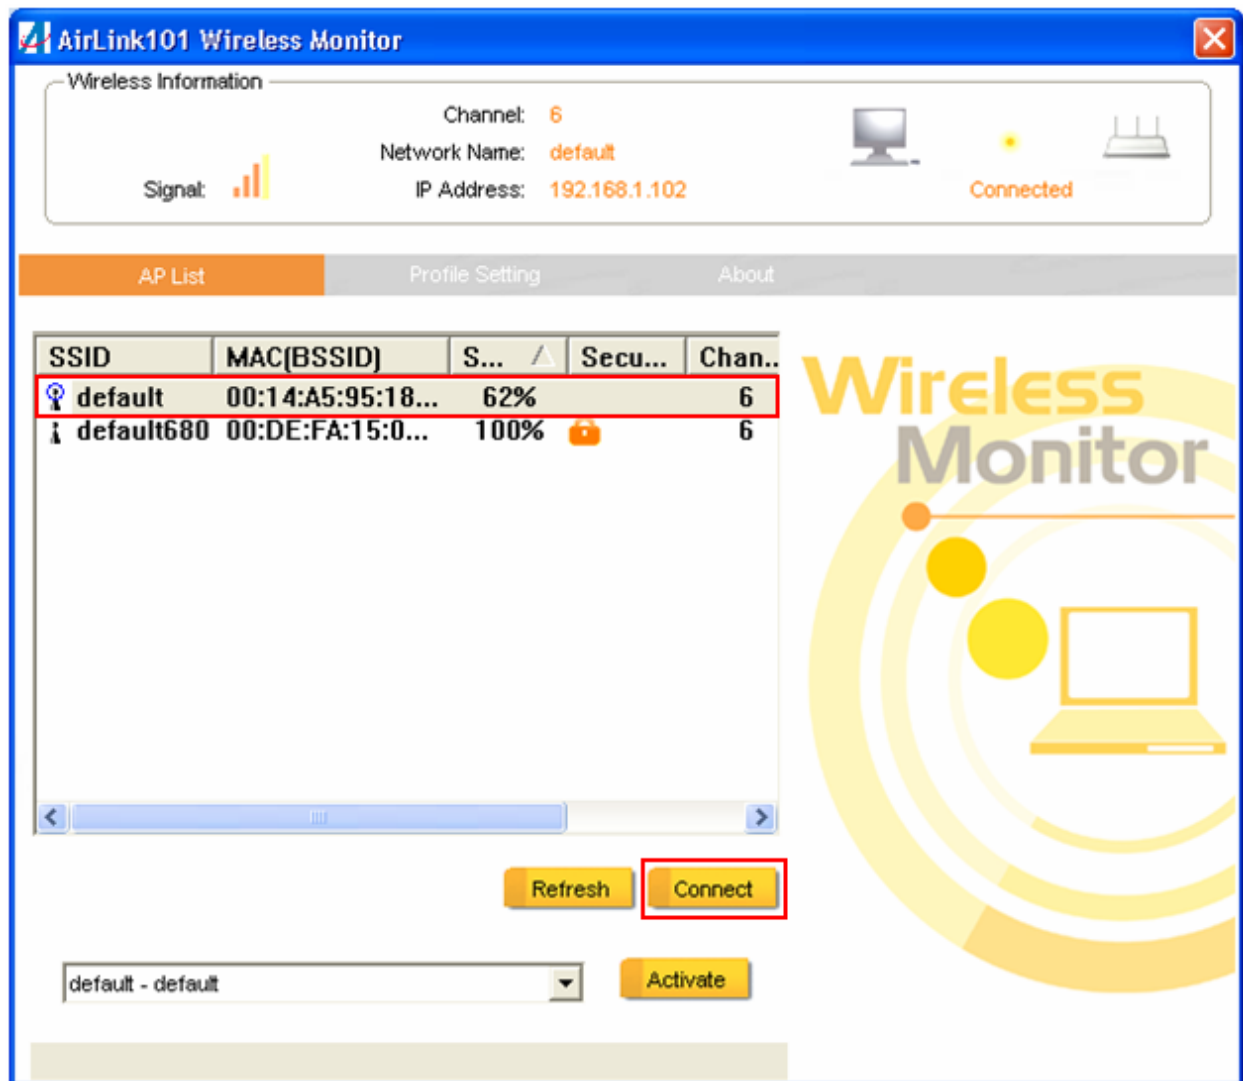


If the network you are attempting to connect to is configured for encryption, you will see an orange lock icon next to the network.



When you click on it and click connect, a box will pop up requesting the wireless encryption key for the router. Enter the encryption key into the box and click **OK**.

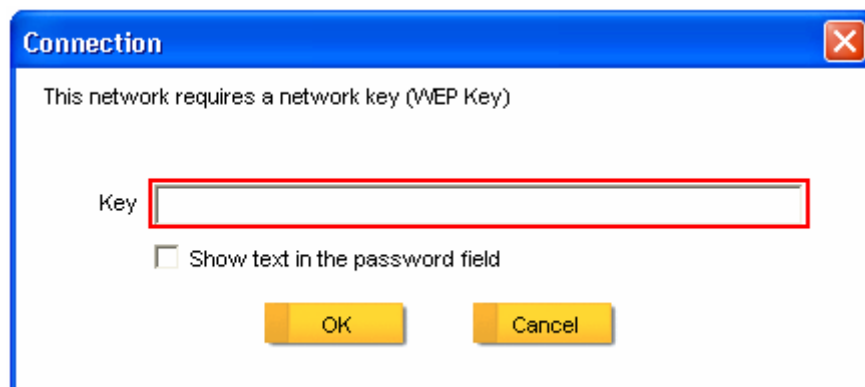

Step 3 You should now be connected. You should see “Connected” in the top, right hand corner, and there will be a blue circle around the antenna icon next to the network name.

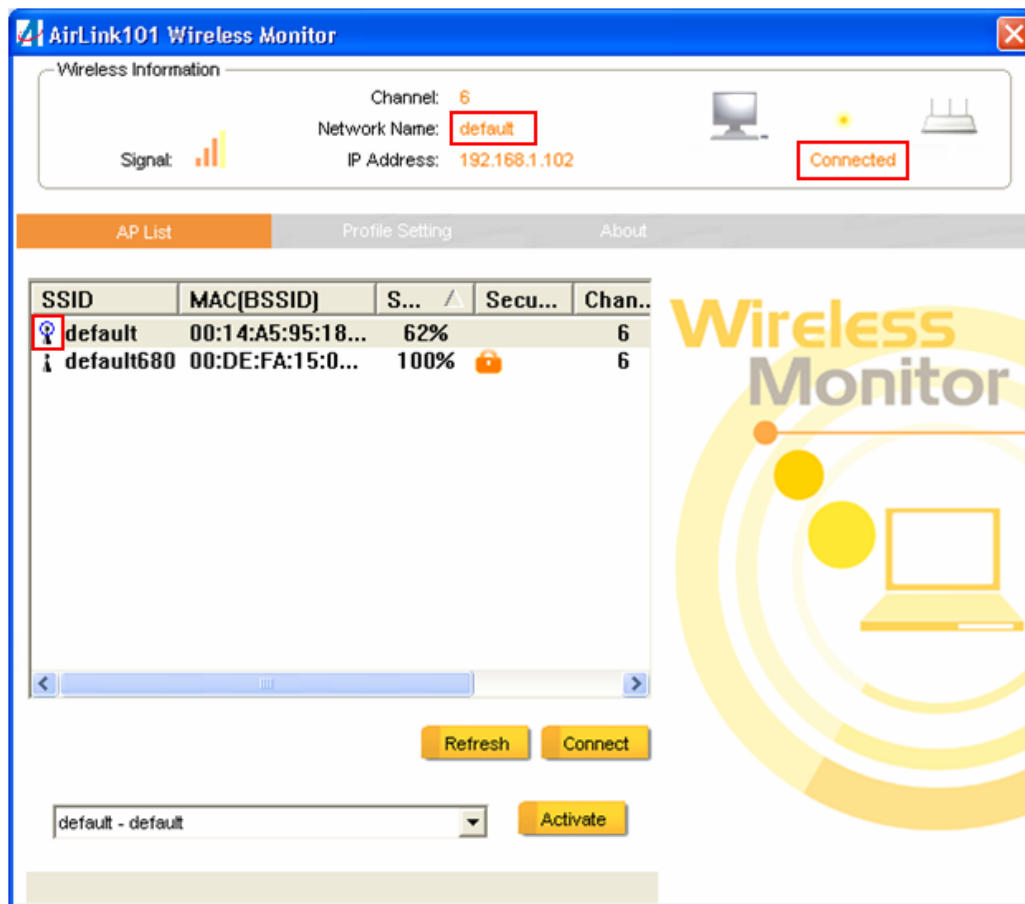

Troubleshooting: If you are experiencing problems with the connection (unable to connect, low signal strength, slow connection speed, not working, unstable wireless connection) you will want to tune your router’s signal by changing channels on the router.

You do not need to change the channel on the card, it will automatically pick up the new channel after you reboot. The only channel that you need to change is the router’s channel.

Your router has 11 different channels to choose from. Start with channel 1 and work your way up. Each time you change the channel on the router, make sure that you restart the wireless computer before trying to connect again. Keep going through the channels until you find one that gives you a stable connection.


For instructions on changing channels, refer to the documentation that came with your router.

4. Wireless Monitor

This section describes the various functions of the Wireless Monitor that you can configure, including the settings of wireless encryption.


4.1 Wireless Information

The **Wireless Information** box at the top of the window provides you with the status of the current connection, including signal, network name (SSID), IP Address and router channel.

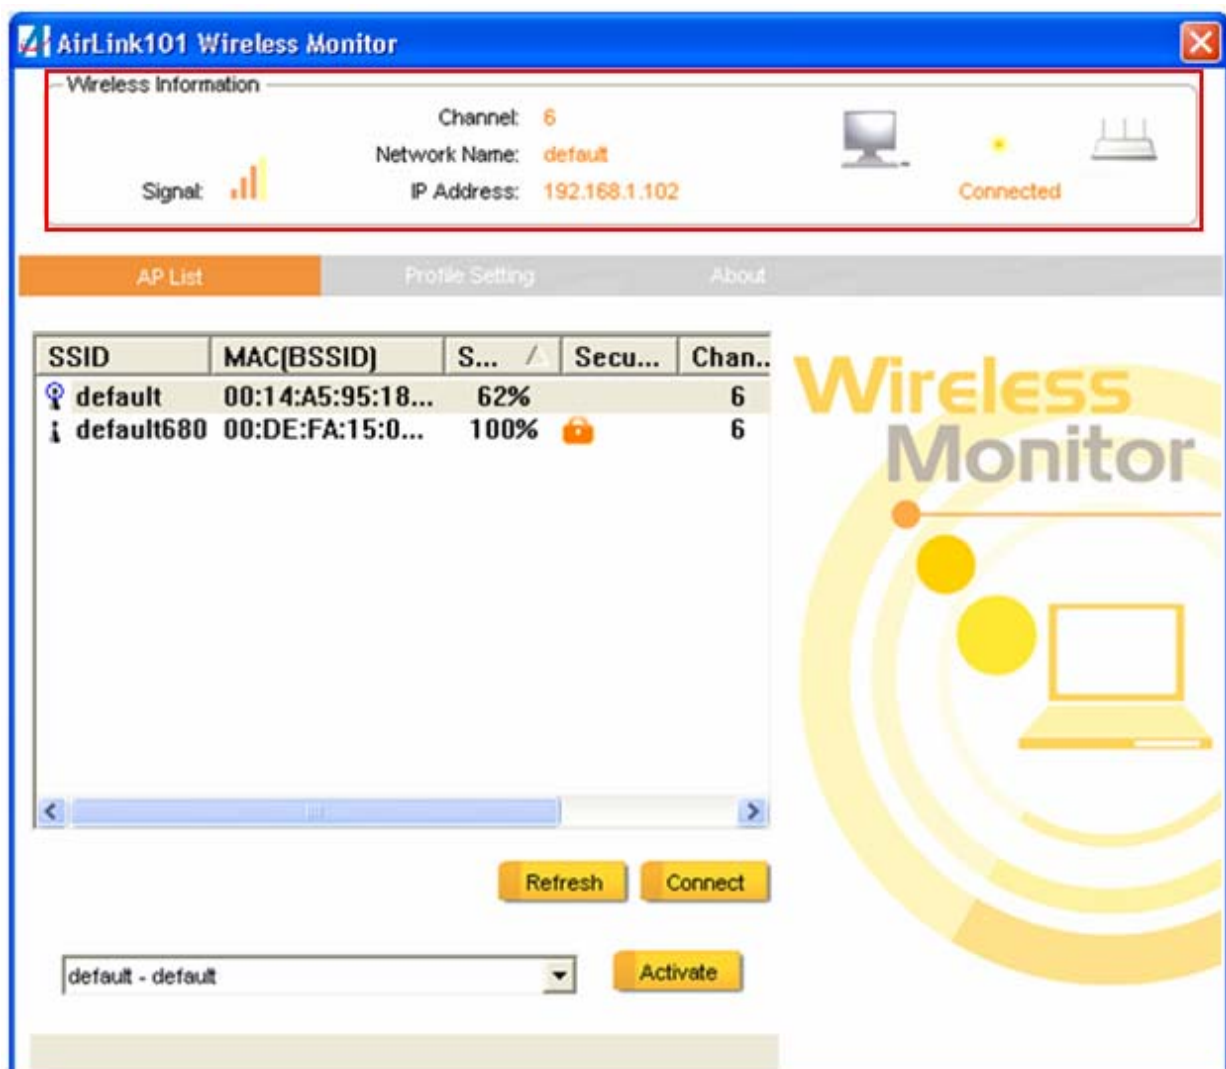

4.2 AP List

The **AP List** tab displays all the available wireless networks detected by the Wireless Adapter. Simply select the wireless network you wish to connect to and click **Connect**. If you have created multiple profiles, you can use the profile chooser at the bottom to select the specific profile you want to use. Then click **Activate** to enable that profile.

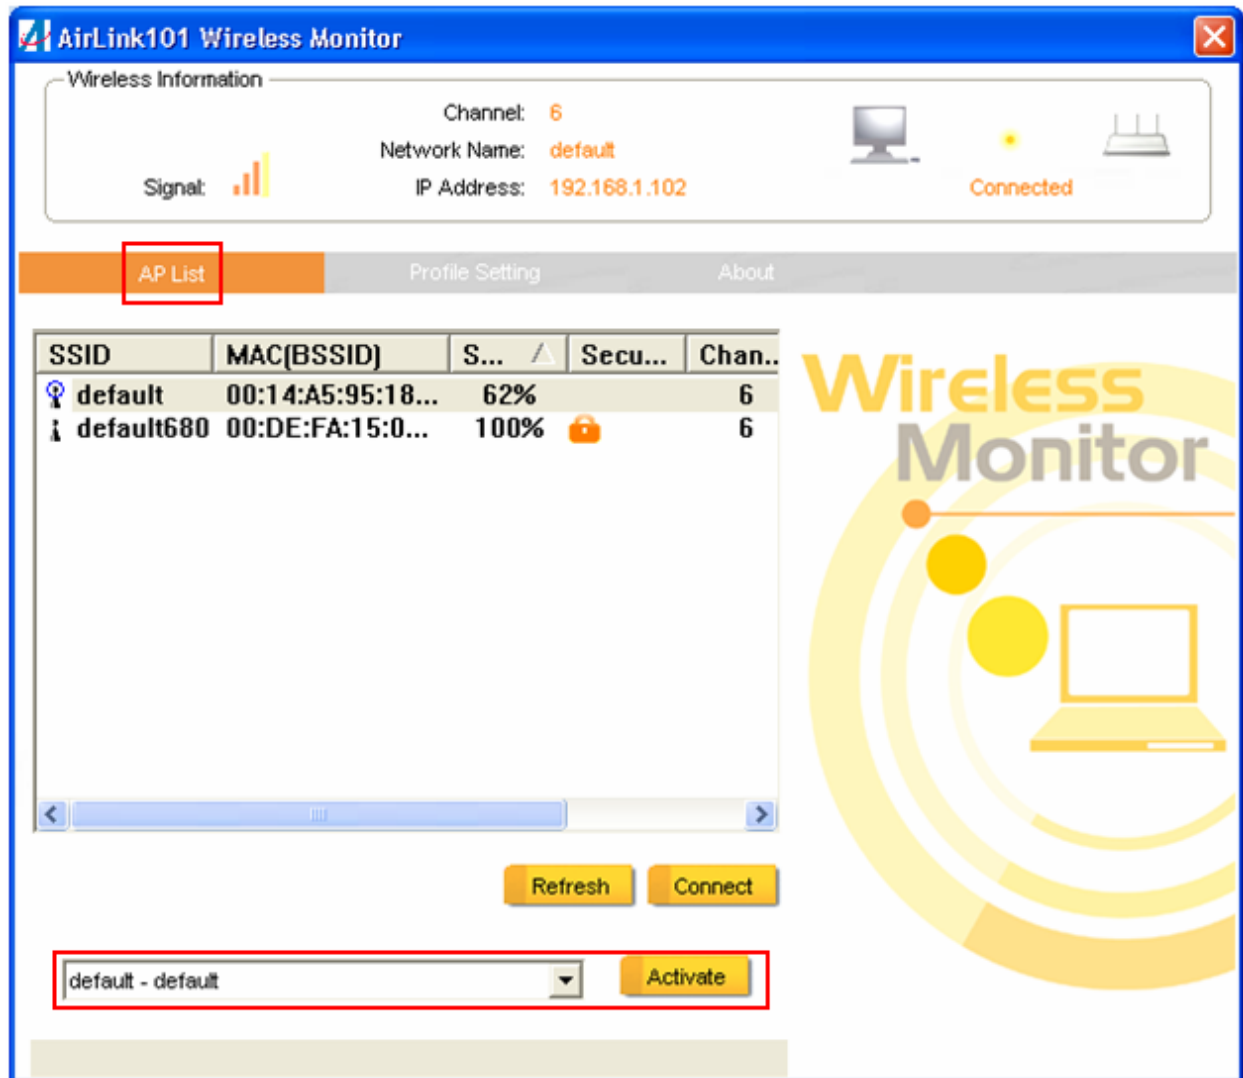

4.3 Profile Settings

This section provides instructions on using the **Profile Settings** section of the wireless monitor.




The **My Wireless Networks** box lists the different profiles you've created for the different networks that you use. Profiles are automatically created and added to this list when you connect to new networks. You can also manually add profiles.

To modify an existing profile, select that profile from the **My Wireless Networks** box and click on modify.

To create a new profile, click on **New**.

The **Profile Settings** box will appear allowing you to specify the settings for your new profile or change settings for your existing profile.

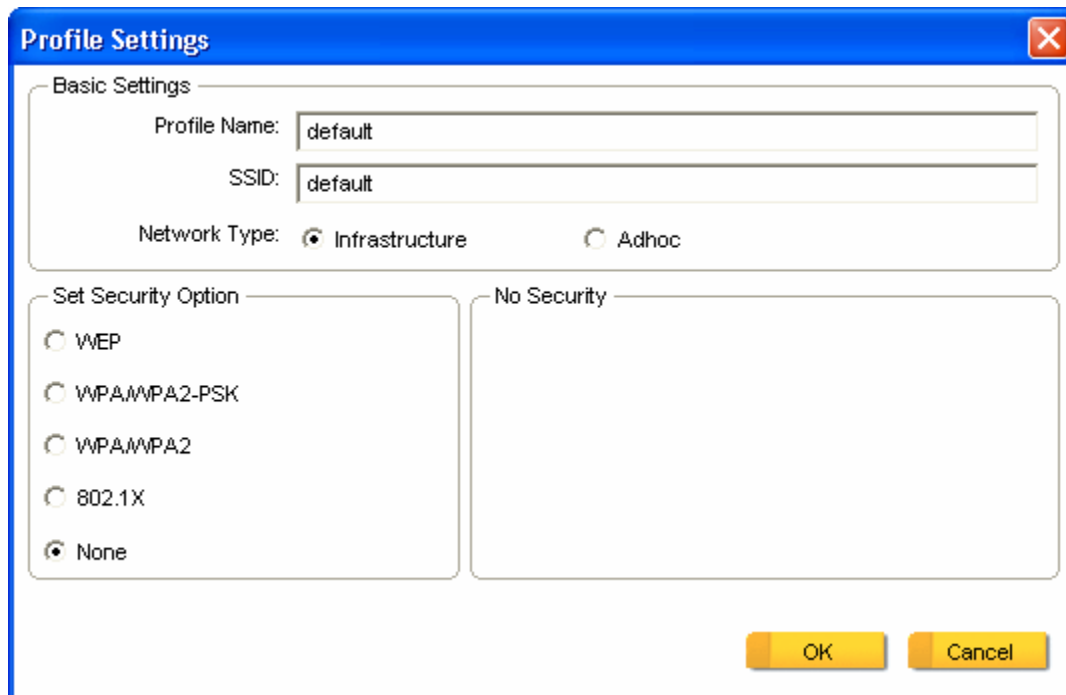

The screenshot shows a 'Profile Settings' dialog box with a blue title bar and a close button. It contains two main sections: 'Basic Settings' and 'Set Security Option'. In 'Basic Settings', there are text boxes for 'Profile Name' (containing 'default') and 'SSID' (containing 'default'), and radio buttons for 'Network Type' with 'Infrastructure' selected and 'Adhoc' unselected. The 'Set Security Option' section has a list of radio buttons: 'WEP', 'WPA/WPA2-PSK', 'WPA/WPA2', '802.1X', and 'None', with 'None' selected. To the right of this list is a 'No Security' section. At the bottom right are 'OK' and 'Cancel' buttons.

Profile Settings

Basic Settings

Profile Name: default

SSID: default

Network Type: ☒ Infrastructure ☐ Adhoc

Set Security Option

☐ WEP

☐ WPA/WPA2-PSK

☐ WPA/WPA2

☐ 802.1X

☒ None

No Security

OK Cancel

Once you are finished entering the settings, click **OK** to save the changes.

4.4 Configuring Encryption

This section describes the different types of encryption available and how to configure them. In most cases, encryption will be automatically configured and all that will need to be entered is the key, as described in **Section 3 Step 2**. The only time you will need to manually configure the encryption settings is if you are creating a custom profile.

Click on **Profile Settings** then **New**.



The profile settings box will appear. This is where you will change your encryption settings. As you can see you have five different options to choose from.

Profile Settings

Basic Settings

Profile Name: default

SSID: default

Network Type: ☒ Infrastructure ☐ Adhoc

Set Security Option

- ☐ WEP
- ☐ WPA/WPA2-PSK
- ☐ WPA/WPA2
- ☐ 802.1X
- ☒ None

No Security

OK Cancel

These three are meant for the home user:

None: No encryption in use

WEP: The most popular but least secure form of encryption

WPA/WPA2-PSK: The most secure and recommended level of encryption

The remaining two are for use in a corporate environment that utilizes authentication servers. If you do not know if you have an authentication server, you probably don't and will want to stick with the three options above.

Configuring WEP encryption

The screenshot shows the 'Profile Settings' dialog box with the following fields and options:

- Basic Settings:**
 - Profile Name: [Empty text box]
 - SSID: [Empty text box]
 - Network Type: ☒ Infrastructure ☐ Adhoc
- Set Security Option:**
 - ☒ WEP (highlighted with a red box)
 - ☐ WPA/WPA2-PSK
 - ☐ WPA/WPA2
 - ☐ 802.1X
 - ☐ None
- Wired Equivalent Privacy (WEP):**
 - ☒ Open ☒ Shared (highlighted with a red box) ☐ Auto
 - Key: [Empty text box]
 - Key Length: 64 bits (40+24) - 10 Hexadeci (highlighted with a red box)
 - Key Index: 1 (highlighted with a red box)
 - ☐ Show text in the password field
- Buttons:** OK, Cancel

Select **WEP** from the **Set Security Option** box.

Under **Wired Equivalent Privacy (WEP)**, you will want to select **Shared** or **Open**, depending on the router settings.

In the **Key** box, you will want to type in the encryption key for the router. If you check the **Show text in the password field** box, your key will appear in the box as you are typing it instead of showing only asterisks. This is helpful as it allows you to double check the key before saving the changes.

Key Length will also be predetermined by the router. Refer to your routers settings to find out what you should select here.

Key Index is the key on the router that is currently in use. Refer to your routers settings to find out what you should choose.

Once you are done, click **OK** to save your settings.

Configuring WPA/WPA2-PSK Encryption (for home users)

The screenshot shows a 'Profile Settings' window with a blue title bar and a close button. It is divided into two main sections: 'Basic Settings' and 'Set Security Option'.

Basic Settings:

- Profile Name: [Empty text field]
- SSID: [Empty text field]
- Network Type: ☒ Infrastructure ☐ Adhoc

Set Security Option:

- ☐ WEP
- ☒ WPA/WPA2-PSK (highlighted with a red box)
- ☐ WPA/WPA2
- ☐ 802.1X
- ☐ None

Passphrase Settings:

- ☒ TKIP ☐ AES (highlighted with a red box)
- ☐ Auto
- Key: [Empty text field] (highlighted with a red box)


At the bottom right, there is a checkbox labeled 'Show text in the password field' which is unchecked, and two yellow buttons labeled 'OK' and 'Cancel'.

Select **WPA/WPA2-PSK** from the **Set Security Option** box.

Under **Passphrase Settings** select either **TKIP** or **AES** depending on the settings for your router.

Enter the encryption key into the **KEY** box.

Configuring WPA/WPA2 Encryption (for corporate networks)

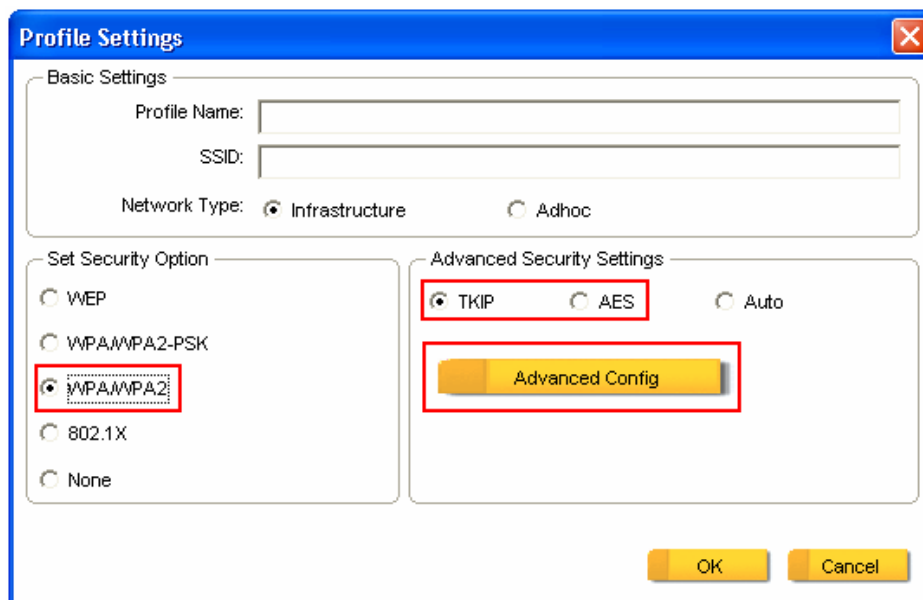


The **Profile Settings** dialog box is shown. It has a blue title bar with a close button. The **Basic Settings** section includes fields for **Profile Name** and **SSID**, and a **Network Type** section with **Infrastructure** (selected) and **Adhoc** radio buttons. The **Set Security Option** section has radio buttons for **WEP**, **WPA/WPA2-PSK**, **WPA/WPA2** (selected and highlighted with a red box), **802.1X**, and **None**. The **Advanced Security Settings** section has radio buttons for **TKIP** (selected and highlighted with a red box), **AES**, and **Auto**. Below these is a yellow **Advanced Config** button, also highlighted with a red box. At the bottom are **OK** and **Cancel** buttons.

Select **WPA/WPA2** from the **Set Security Option** box.

Under **Advanced Security Settings** select either **TKIP** or **AES** depending on the settings for your router.


Click on **Advanced Config** to enter your authentication settings.

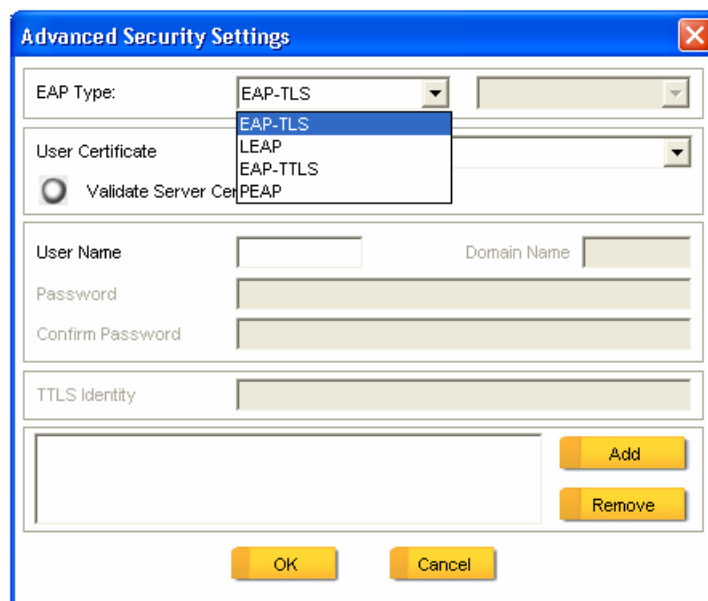

The **Advanced Security Settings** dialog box is shown. It has a blue title bar with a close button. The **EAP Type** dropdown menu is open, showing options: **EAP-TLS** (selected), **EAP-TLS**, **LEAP**, **EAP-TTLS**, and **PEAP**. There is a **Validate Server Certificate** checkbox. Below are fields for **User Name**, **Domain Name**, **Password**, and **Confirm Password**. There is also a **TTLS Identity** field. At the bottom are **Add** and **Remove** buttons, and **OK** and **Cancel** buttons.

The adapter supports EAP-TLS, LEAP, EAP-TTLS, and PEAP authentication methods. Refer to your system administrator for information about what settings you should enter here.


Configuring 802.1x authentication (for corporate networks)

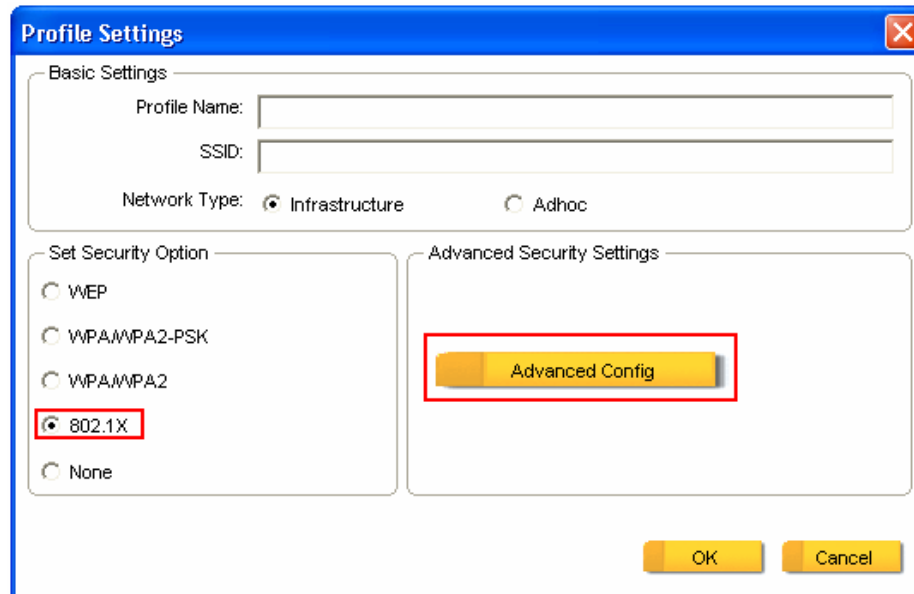

The **Profile Settings** dialog box is shown. It has a blue title bar with a close button. The **Basic Settings** section contains fields for **Profile Name** and **SSID**, and a **Network Type** section with **Infrastructure** (selected) and **Adhoc** radio buttons. The **Set Security Option** section has five radio buttons: **WEP**, **WPA/WPA2-PSK**, **WPA/WPA2**, **802.1X** (selected and highlighted with a red box), and **None**. The **Advanced Security Settings** section contains a yellow **Advanced Config** button, also highlighted with a red box. At the bottom are **OK** and **Cancel** buttons.

Select **802.1x** from the **Set Security Option** box.

Click on **Advanced Config** to enter your authentication settings.

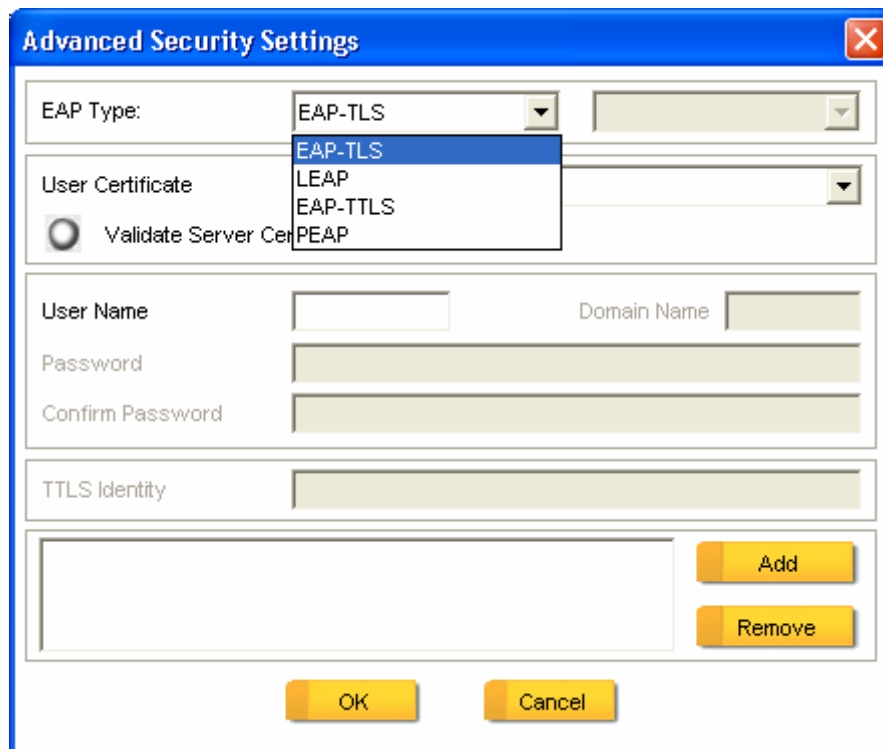

The **Advanced Security Settings** dialog box is shown. It has a blue title bar with a close button. The **EAP Type** dropdown menu is open, showing options: **EAP-TLS** (selected), **LEAP**, **EAP-TTLS**, and **PEAP**. Below this is a **User Certificate** section with a **Validate Server Certificate** checkbox. The **User Name** and **Domain Name** fields are present. Below these are **Password** and **Confirm Password** fields. The **TTLS Identity** field is also present. At the bottom are **OK** and **Cancel** buttons. On the right side, there are **Add** and **Remove** buttons next to a list box.

The adapter supports EAP-TLS, LEAP, EAP-TTLS, and PEAP authentication methods. Refer to your system administrator for information about what settings you should enter here.

4.5 Ad-hoc and Peer-to-Peer Wireless Networks

Ad-hoc networking is used when you want to connect two or more computers together but you don't have a router.

In ad-hoc mode, you lose a lot of the features that come with a router. Instead of being able to operate at 150Mbps, the maximum connection speed is significantly less at 11Mbps. WEP encryption is the only security available in ad-hoc mode.

To set up ad-hoc mode, you will need to create a new profile.



Open the **Wireless Monitor**.

Click on **Profile Setting**, then click on **New**.

The profile settings box will appear.

The screenshot shows the 'Profile Settings' dialog box. The 'Basic Settings' section includes fields for 'Profile Name' and 'SSID', radio buttons for 'Network Type' (Infrastructure and Adhoc), and a 'Channel' dropdown menu. The 'Set Security Option' section includes radio buttons for 'WEP' and 'None'. The 'Adhoc' radio button and the 'None' radio button are selected. Red boxes highlight the 'Profile Name' and 'SSID' fields, the 'Adhoc' radio button, the 'Channel' dropdown, and the 'None' radio button. At the bottom are 'OK' and 'Cancel' buttons.

First change the network type to **Adhoc**. (Infrastructure is for when you are using a router).

Enter a profile name into the **Profile Name** box so that you can identify the profile.


Type in a network name (SSID) into the **SSID** box

Select your desired **Channel**

You can also choose between no security or WEP security. If you choose WEP security, you can follow the instructions in the **Configuring Encryption** section of the manual.

Click **OK** to save the profile.

Once that is done, click on the **AP List**.

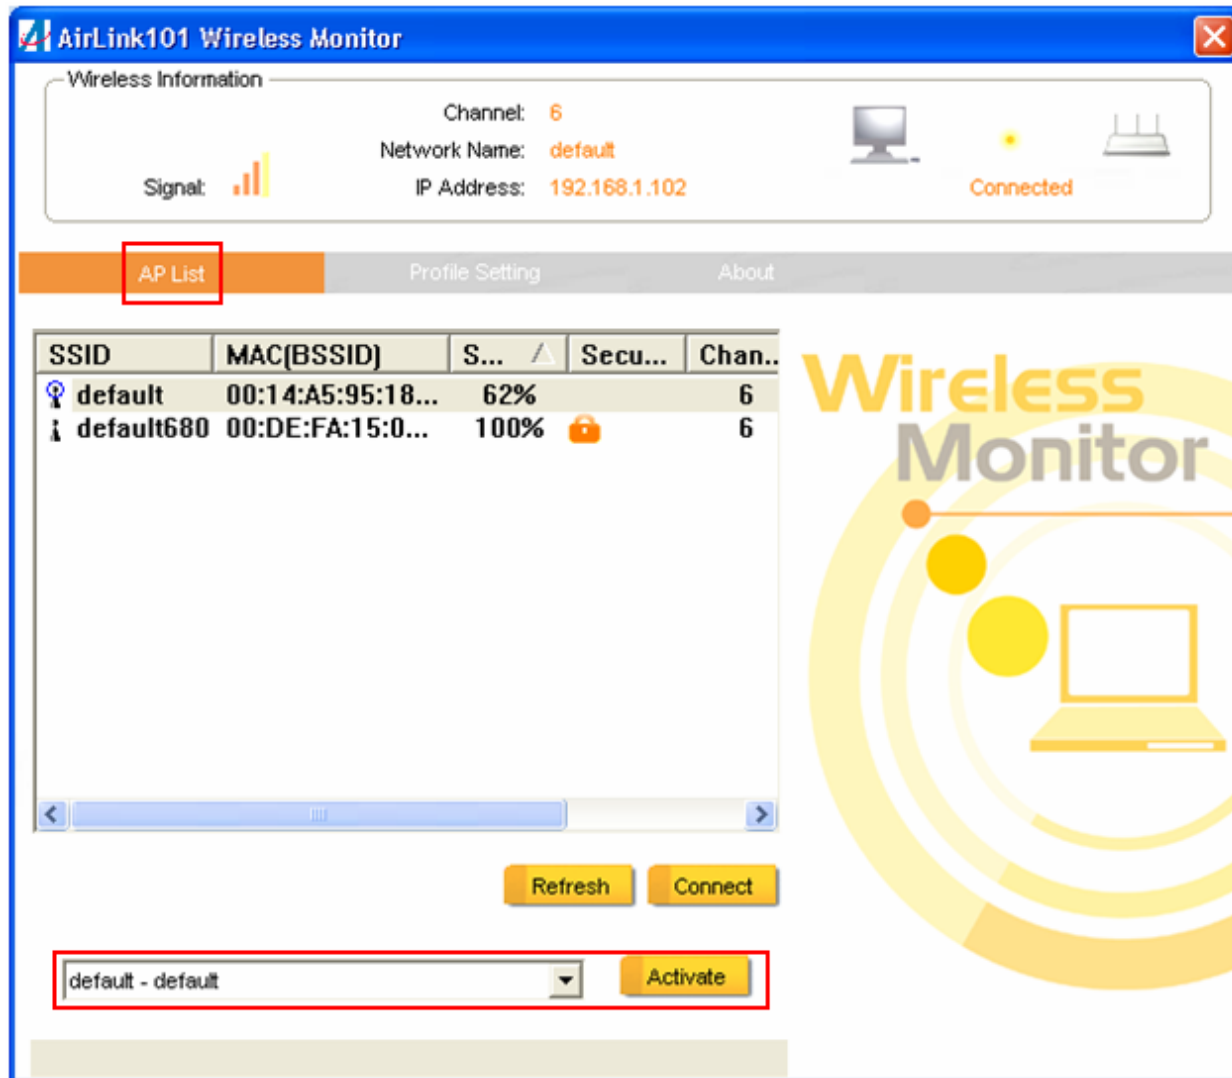

Select your new profile from the profile chooser and click **Activate** to enable the profile.

You will need to configure all other computers that you are planning on connecting to your ad-hoc network with the same settings that you input on this screen. Every computer has to be set up exactly the same. If any of the settings are different, the network will not function.

Troubleshooting: If you are having trouble connecting, if the connection is slow, or if it is unstable, you will want to try changing channels. Start with channel 1 and work your way up until you find a channel that gives you a stable connection. Each time you change the channel, save the settings, then reboot the computer. Also make sure that you do this on every ad-hoc machine so that they will all be set to the same channel.

4.6 About

The About tab shows the Utility, Driver, and Firmware version as well as the MAC address of the adapter.



Appendix A – Features

Frequency Band

- 2.4~2.5 GHz

Standards

- IEEE 802.11b / 802.11g
- 802.11n draft 2.0

Interface

- USB 2.0

Security

- WPA-PSK (TKIP)
- WPA2-PSK (AES)

Transmitted Power

- 802.11b: 17 dBm@1TX;
20 dBm@2TX
- 802.11g: 13 dBm@1TX;
16 dBm@2TX
- Draft 11n: 13 dBm@1TX;
16 dBm@2TX

Data Rate

- Transmitting: Up to 150Mbps*
- Receiving: Up to 300Mbps*

System Requirements

- 150 MHz processor or better
- 64 MB RAM
- Available USB port

OS Compatibility

- Windows 2000/XP/Vista

Weight

- 181g

Dimensions

- 77 x 27 x 14mm (L x W x H)

Temperature

- Operating: 0°C to 60°C
- Storage: -20°C to 80°C

Humidity

- Operating: 10% to 80% Non-Condensing
- Storage: 5% to 90% Non-Condensing

Warranty

- Limited 1-year warranty

Safety Approvals

- FCC, CE, IC

Appendix B – Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

European Union Notice:

Radio products with the CE marking comply with the R&TTE Directive (1999/5/EC), the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms:

- EN 60950 Product Safety
- EN 150 328 Technical requirement for radio equipment
- EN 301 489-1/-17 General EMC requirements for radio equipment

Technical Support

E-mail: support@airlink101.com

Toll Free: 1-888-746-3238

Web Site: www.airlink101.com

*Theoretical maximum wireless signal rate derived from IEEE 802.11g standard and IEEE 802.11n draft specification version 2.0. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, mix of wireless products used, radio frequency interference (e.g., cordless telephones and microwaves) as well as network overhead lower actual data throughput rate. Specifications are subject to change without notice. All products and trademarks are the property of their respective owners. Copyright ©2008 AirLink101®